


WCB3000N Modem Wall Mounting Template


PN xxxx-xxxx-xxx

MT1192/0513

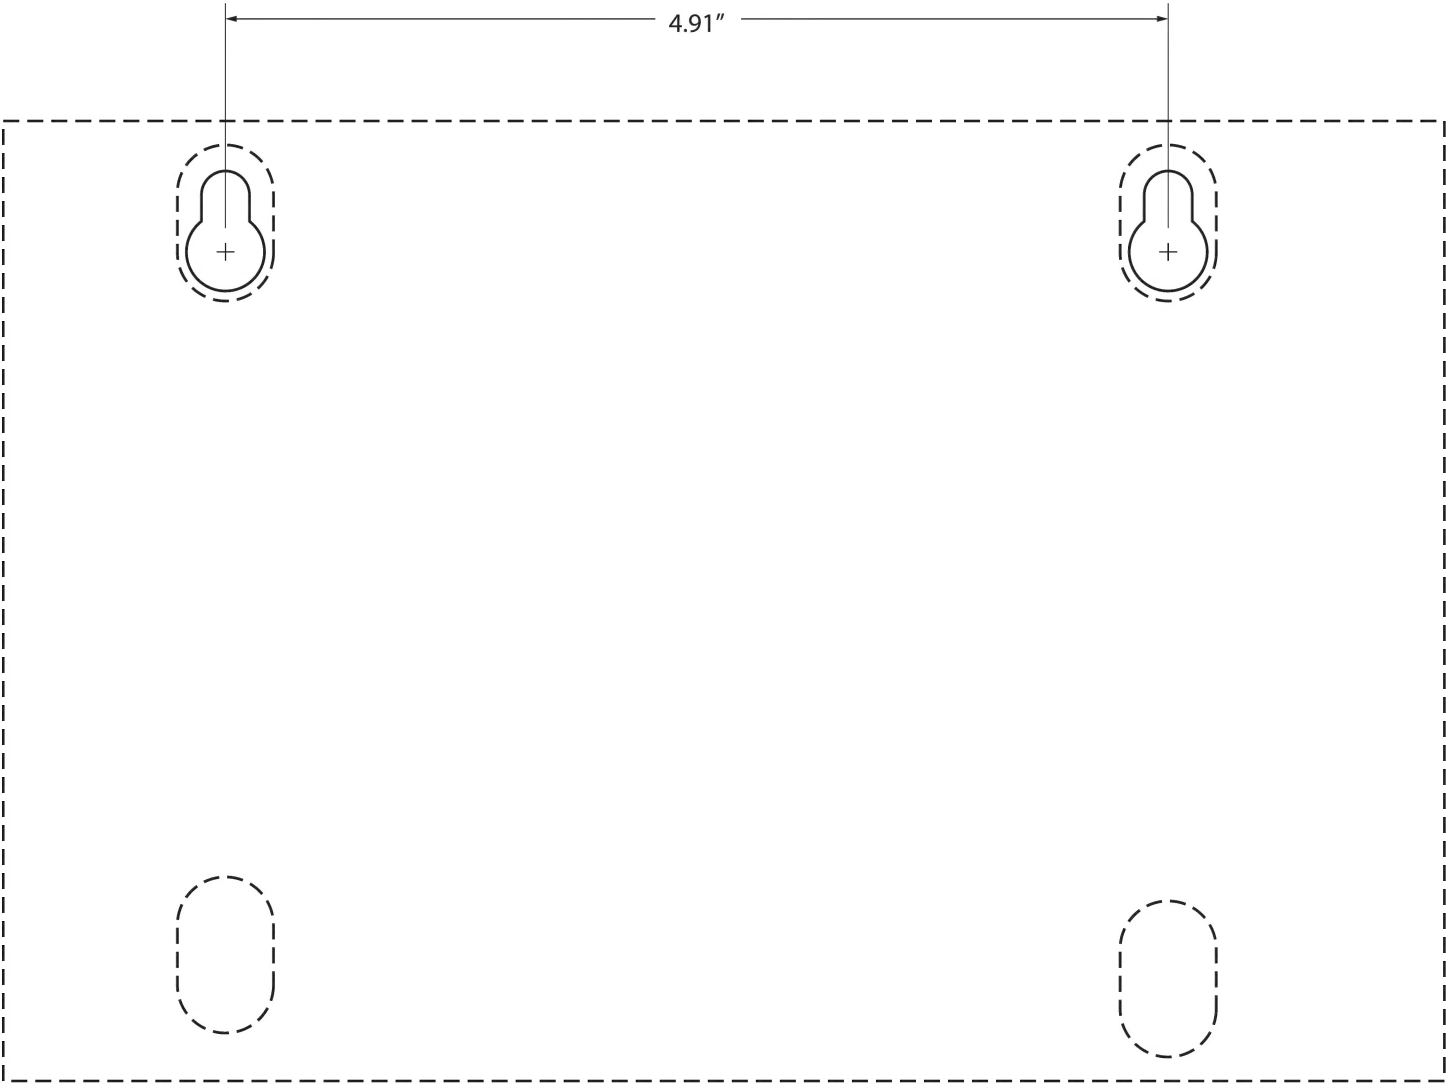



1. Place the template on the wall in the position the device will be mounted.
2. Mark the mounting holes. If mounting on wood, drill holes for the screws. If mounting on drywall, drill holes to accept drywall anchors. A 3/16" drill bit is recommended for plastic anchors.
3. Leave screws extended about 0.2 inches from the wall.
4. Remove all 4 rubber feet from the bottom of the device.
5. Locate the device keyhole openings over the screw heads and mount the device onto the screws.

Fasteners

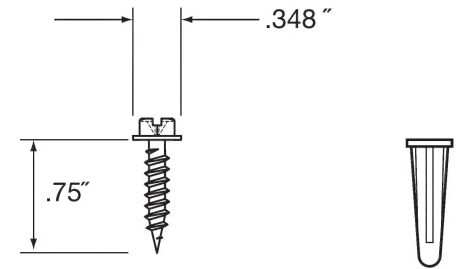

(2) #8 Slotted/Phillip
Hex Washer Screws

(2) Plastic
Screw Anchors

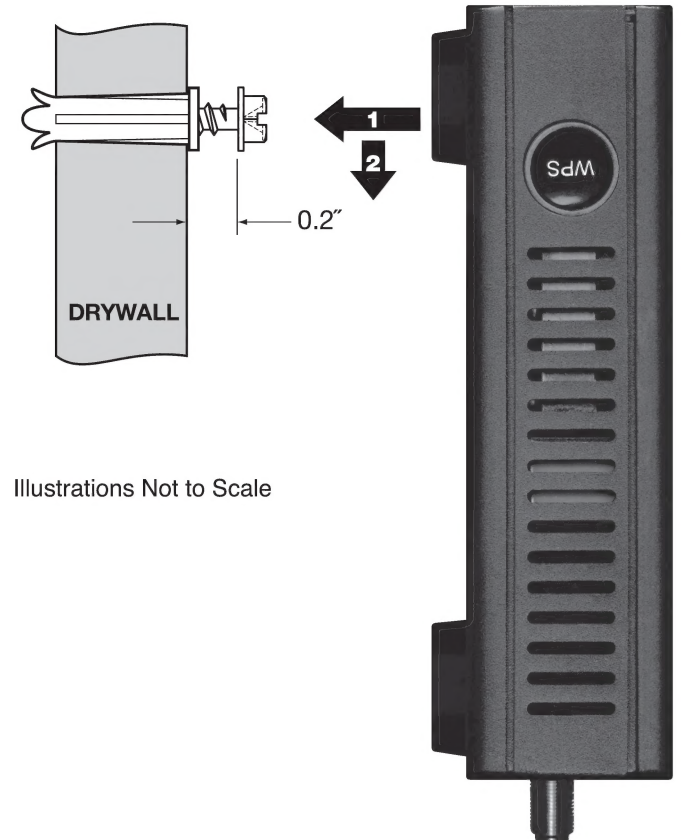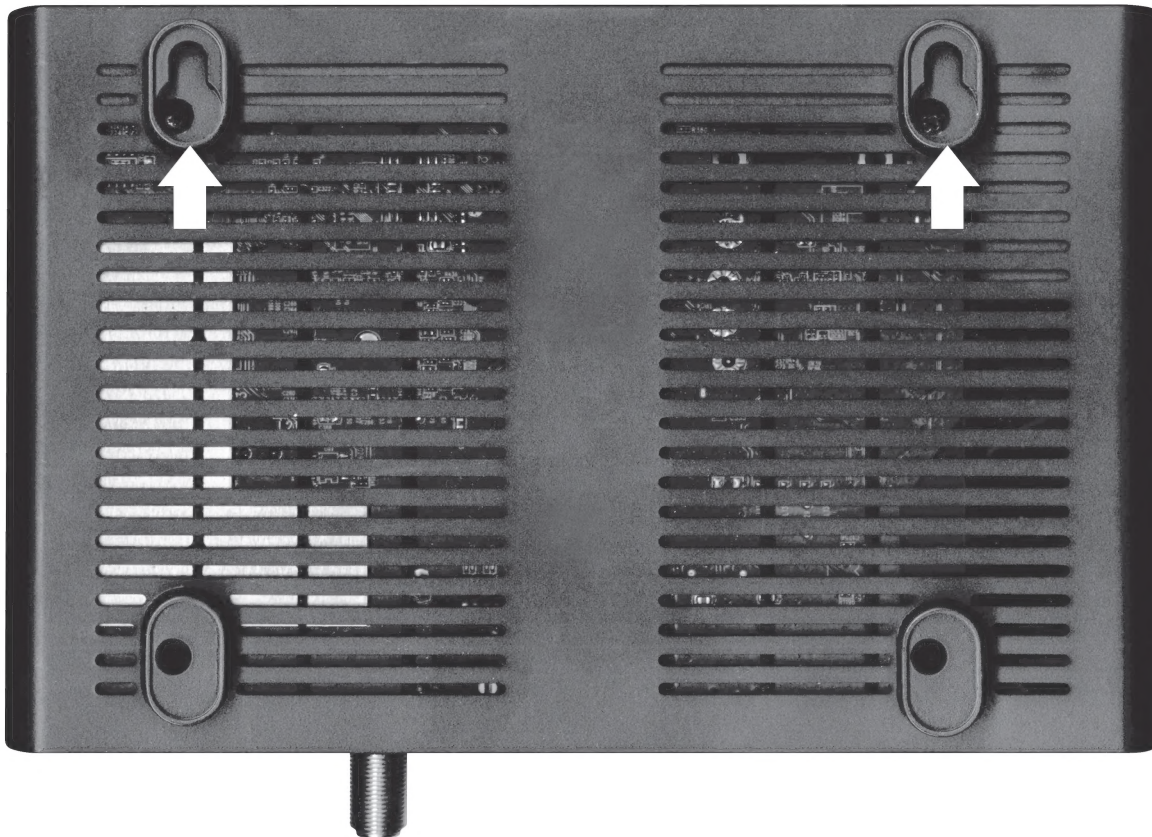

Illustrations Not to Scale